身份证阅读器安装流程

1、选择全部文件解压到本地。



| ③ 身份证阅读器.zip - Bandizip 6.17 - □ × | | | | | | | | \times | |
|---|-------------------|---|--|-----|----------------|---|---|--------------------------------------|-------------|
| 文件(E) 编辑(E) | 查找(<u>l</u>) 选项 | 顷(<u>O)</u> 视图(<u>V</u>) | 帮助(<u>H</u>) | | | | | | |
| → × | よう 新 歴 | Y U | + 赤加 | 一副除 | <i>-</i> 测试 | 。 | 代码页 | | 82 |
| ♪ 身份证阅读器.z 、 二代证驱动 | zip (支持32位、 | 64(64() 二代证) Sdtap) termb) UnPad 可身份证 可身份证 可含证 | 名称 ▲ 二代证驱动 (支持32位、64位) 2014版 ④ sdtapi.dll ④ termb.dll ④ UnPack.dll ● 身份证识别.exe ● 阅读终端安装程序_v3.0.1.exe | | | 压缩后大小 26,818 116,806 55,491 18,041 7,338,779 | 原始大小 61,440 258,048 122,880 65,536 7,363,105 | 类型 应用程序初 应用程序初 应用程序 应用程序 | · 展 展 |

2、先安装阅读终端安装程序





3、选择对应PC的32位、64位进行安装驱动。



4、把身份证识别添加到桌面快捷方式





5、首先打开阅读终端程序再打开身份证识别





- 6、把身份证放置在身份证阅读设备上后这里会显示读取身份证的信息。
- 7、成功读取后,在全球共德实名制系统新增人员输入身份证号码按确认, 会自动填写身份证对应的信息。

| 3 电子身份证阅读器 | × |
|---------------------------------|-------------------------------|
| 全球共德 | ——实名制系统 |
| 身份证号 有效期限 至 住址 登发机关 | 姓名 性别 民族 生日 |